



ATLAS 800 BACKUP POWER SUPPLY INSTALLATION INSTRUCTIONS

ATLAS 800 BACKUP POWER SUPPLY
P.N. 1200.220L1

This product is designed for use in the ATLAS 800, model number 1200.180L1.



CAUTION Remove the power cord from the power supply prior to installing or removing unit.



CAUTION For continued protection against risk of fire, replace only with same type and rating of fuse.

To install the backup power supply in the ATLAS 800:

1. Remove the cover plates from option slots seven and eight by removing the two screws.
2. Ensure there is no power cord attached to the replacement power supply.
3. Insert the backup power supply into ATLAS option slot eight.
4. Fasten the backup power supply to ATLAS by replacing two screws.
5. Connect the power cord to the unit.
6. Switch the backup power supply **On**.
7. Verify operation of the power supply by checking the front panel LEDs. The LEDs for slots seven and eight as well as the system LED should be green.

